


## SF450EN CARBON MONOXIDE DETECTOR PROCEDURE TO DEACTIVATE UNIT

Turn your detector over so that you are looking at the sticky label on the rear of the unit. Hold the unit lengthways so that the text on the label is facing the correct way for you to read it.

1. In the middle of the label, on the left, is a large black X. This indicates the area for deactivation of the unit.




2. Pierce the label at the point marked with the X (with a ballpoint pen) to reveal the 'ON' switch (as shown below).

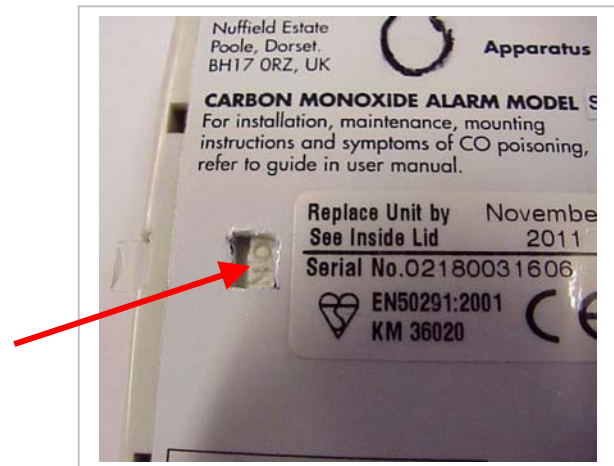

3. Insert the pen into the groove to the left of the word 'ON'.



4. Using the pen, push the plastic 'ON' switch over to the right.

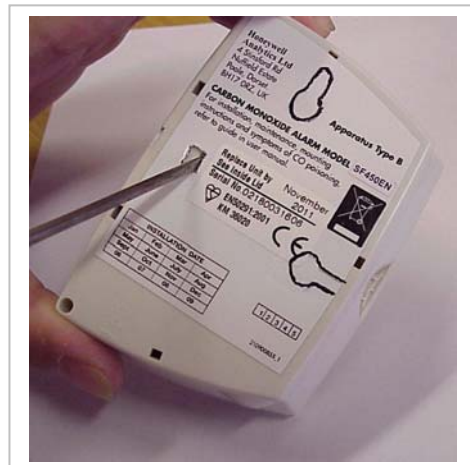

### 5. PLEASE NOTE:

As a secondary check to ensure the unit is deactivated, turn the unit over to its front and press the "Test" button for up to 5 seconds. The unit will not bleep and no lights will flash if the unit is deactivated.

### 6. **IMPORTANT**

Now that you have deactivated your unit, return to the "**Procedure to deactivate your unit**" page on the website and follow step 6 to obtain a return code for your unit.